



[Knowledgebase](#) > [Moto Watch 70](#) > [Troubleshooting & Setup](#) > [General Troubleshooting: How to Reset Your Moto Watch 70](#)

General Troubleshooting: How to Reset Your Moto Watch 70

Inas B. - 2025-10-08 - [Troubleshooting & Setup](#)

If your Moto Watch 70 is experiencing issues, performing a reset can often resolve common problems. Here's how to reset your device safely:

Option 1: Using the Button

- Press and hold the watch's button for 30 seconds.
- This will initiate a reset, erasing all data and restoring the watch to its factory settings.

Option 2: Using the Watch Settings

- From the watch face, swipe down to open the Quick Settings menu.
- Tap the **Settings** icon.
- Scroll down and select **System**.
- Tap **Reset** and confirm to restore the watch to its original settings.

Important Note:

Resetting your Moto Watch 70 will delete all stored data, including activity logs and custom settings. Be sure to back up any important information before performing a reset.