



[Knowledgebase](#) > [Moto Watch 70](#) > [Troubleshooting & Setup](#) > [Receiving and Managing Notifications on Your Moto Watch 70](#)

Receiving and Managing Notifications on Your Moto Watch 70

Inas B. - 2025-10-08 - [Troubleshooting & Setup](#)

The Moto Watch 70 keeps you connected by efficiently managing your notifications. Here's how to view, manage, and clear them:

Notification Alerts

- When your connected phone sends a notification, your watch will vibrate to alert you.
- The message will appear on the screen for 10 seconds.

Managing Notifications

You can manage or dismiss notifications in several ways:

- **Swipe Left to Right:** Hide the notification and keep it for later.
- **Short Press the Physical Button:** Dismiss the notification.
- **Wait for Screen Timeout:** The notification will clear automatically when the screen turns off.

Accessing Notifications Later

- **Swipe Up** from the watch face to open the notifications list.
- **Tap a Notification** to read the full text and details.
- **Swipe Left to Right** to go back to the list.

Notification Limit

Your Moto Watch 70 stores up to **10 recent notifications**. When the limit is reached, the oldest notification will be deleted automatically.

Manual Clearing

- Tap the notification you wish to remove.
- Swipe **Left to Right** to delete it.

By following these steps, you can easily organize and manage your Moto Watch 70 notifications while staying focused and connected on the go.