



[Knowledgebase](#) > [Moto Watch 40](#) > [Troubleshooting & Setup](#) > [Troubleshooting Tilt-to-Wake Not Working on Moto Watch 40](#)

Troubleshooting Tilt-to-Wake Not Working on Moto Watch 40

Inas B. - 2025-10-10 - [Troubleshooting & Setup](#)

If your **Moto Watch 40** isn't responding when you raise your wrist, follow these steps to fix the tilt-to-wake feature:

1. Make Sure Do Not Disturb (DND) is OFF

- The tilt-to-wake feature **won't work while DND is enabled**.
- To check:
 1. Swipe down from the watch face to open **Quick Settings**.
 2. Look for the **Do Not Disturb (DND) icon** (crescent moon).
 3. If the moon icon has a dark background, DND is active.
- Tap the icon to turn DND off. Tilt-to-wake should now function properly.

2. Clean the Sensor

- Tilt-to-wake depends on sensors at the back of the watch. Dirt, dust, or oils can interfere with their operation.
- Use a **soft cloth** to gently clean the sensors.

3. Test Tilt-to-Wake

- After turning off DND and cleaning the sensors, **raise your wrist** to check if the screen lights up.
- The display should activate automatically when you tilt or lift your wrist.